

<u>Installer Information for Metal Faceplates</u> ONYX TSW 750 / 752 / 1050 / 1052 - Surface Mount

INSTALLATION

The metal faceplate is supplied with plastic mounting clips that fit over the edge of the touchscreen.

The attachment of the faceplate can be done with the touchscreen mounted in the wall or separately.

Align the faceplate so that the button apertures are in line with the touch buttons, now align the mounting clips with edge of the touchscreen and apply even pressure to all corners until you hear an audible click from each clip.

The faceplate is now secured to the touchscreen.

To remove the faceplate, the touchscreen must be removed from the wall so that you can gain access to the mounting clips. Once you have removed the panel, use your thumbs to push the mounting clips away from the touch-screen and the faceplate will come free. See illustration.

Paintable Finishes - PRODUCT DISCLAIMER

The paintable primer finish supplied on paintable faceplates is designed to give a smooth durable base onto which further topcoat finishes can be applied.

It is recommended that final paint finishes are applied by spraying and NOT brush or roller!


It is very important to keep paint build up around the button apertures to a minimum and to ensure no paint is present on the reverse side in the screen surround area. Excess paint build up could result in malfunction.

The faceplate should be painted with the mounting clips removed to avoid the covering with paint.

No warranty is given for problems caused by paint finishes applied by third parties.

If third parties are painting this product please ensure compatibility of the paint being used before proceeding. Car finishing paints are recommended. Water based paints can be used but are not particularly durable.

Solvent based decorator's gloss or satin paints are <u>not</u> compatible with this primer.

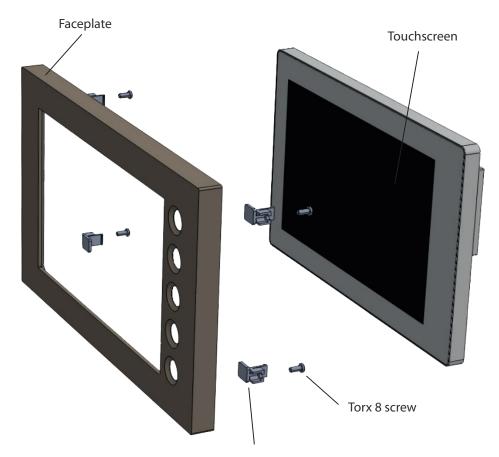

Nylon Mounting Clip

